

Lanready WDR800 console cable wiring

RJ45 to DB9(F) for Lanready WDR-800

RJ45 side DB9 side

1 NC	-
2	3
3	2
4	6
5	4
6	8
7	7
8 NC	-
SHIELD	5
-	9



Ground is connected through RJ45 SHIELD, so SHIELDED RJ45 connector REQUIRED!